

English

HA-3005 HA-3006 HA-4001
HA-4009 HA-7003

AL-HARAMEEN  الحرمين

CONTENTS


MAIN FEATURES	1
OVERVIEW	2-3
SELECTING YOUR CITY	4
ADDING NEW CITY.....	5
QIBLA DIRECTION	6
SETTING THE TIME	7
SETTING THE GREGORIAN CALENDAR	8
SETTING FAJR ALARM	9
SETTING IQAMAM.....	10
SETTING DAILY ALARM	11
SETTING SPECIAL ALARM	12
DAYLIGHT SAVING TIME	13
AZAN SAFETY TIME	14
AZAN SOUND ACTIVATION	15
AZAN TAQWEEM SYSTEMS	16
STOPPING THE ALARMS	17
SNOOZE OPTION	17
WEEKEND SETTING	18
HIJRI CALANDER CALCULATION	19
FREQUENTLY ASKED QUESTIONS	20
CITY CODES	21-47

MAIN FEATURES


1

-  ◀ Azan sound for all prayers (with volume control)
-  ◀ Azan times for most cities around the world
-  ◀ Fajr alarm, adjust automatically everyday
-  ◀ Daily alarm (weekends optional)
-  ◀ Special extra alarm
-  ◀ Qibla direction (relative to North)
-  ◀ Hijri and Gregorian calendars
-  ◀ Temperature display
-  ◀ Daylight saving time option
-  ◀ Snooze option
-  ◀ Full screen Light
-  ◀ Low battery indicator

Front View

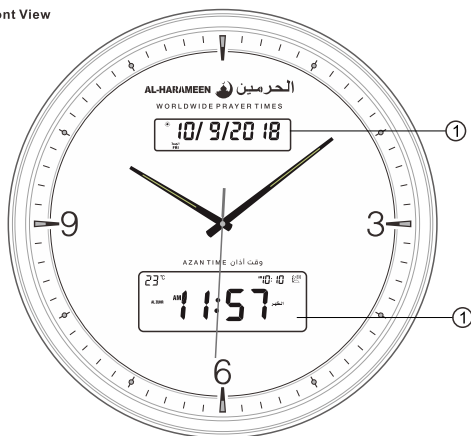



Back View

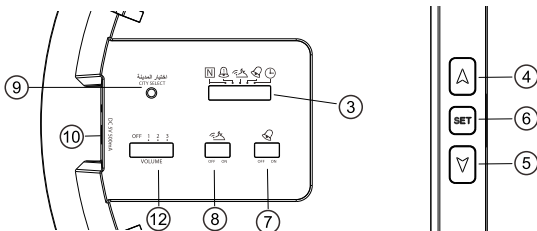

Model No:HA-7003

OVERVIEW

3

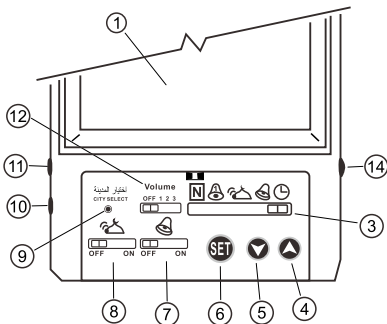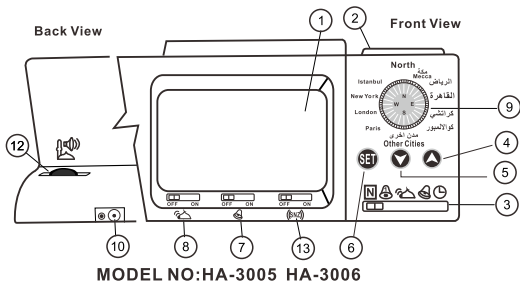

- | | | | |
|----------------------|-----------------------|---------------------------|-------------------|
| 1. LCD display | 5. DOWN button | 9. City selector | 13. Snooze switch |
| 2. STOP button/Light | 6. SET button | 10. DC socket | 14. STOP button |
| 3. Setting switch | 7. Daily alarm switch | 11. Speaker socket | |
| 4. UP button | 8. Fajr alarm switch | 12. Volume control switch | |

SELECTING YOUR CITY

To select a city, look up the telephone code of your city (see page 21-47) , and follow the steps below.

اختيار المدينة
CITY SELECT

North

Mecca

الرياض

القاهرة

كراتشي

كوالالمبور

Other Cities

رمز الدولة
COUNTRY CODE

966-12-1

966-12-2

N
W E
S

1) Press the city select button, in models HA-4004 HA-4009 HA-4001 HA-7003

In model no HA-3005 HA-3006 first move the city dialer and then return it back to (other cities) position.

Use ▼ or ▲ to select the country code, then press SET

Then use ▼ or ▲ to select the City code, then press SET

Qibla direction and angle
Relative to north.

NOTE If azan times are not correct, make sure to correctly set: Gregorian calendar, city code, DST option, and a suitable taqweem system for your city (see page 14).

ADDING NEW CITY

5


- * This clock can be used anywhere around the world. You can select your city directly by selecting its city code.
- * If your location is not one of the major listed cities on page 21-47 your location can be added to the list of cities as [NEW CITY] using latitude, longitude and GMT information

For Example, the following steps show how to set the city of AT TAIF in Saudi Arabia longitude as follow:

اختيار المدينة
CITY SELECT



- 1) Press the city select button, in models HA-4004 HA-4009 HA-4001 HA-7003

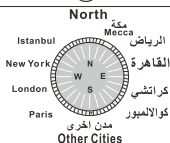

In model HA-3005 HA-3006 first move the city dialer and then return it back to (other cities) position


- 1 Use or till **NEW CITY** display, then press
- 2 Then use or adjust longitude [**40E**] press, then use or adjust minutes [**41E**] the press
- 3 Then use or adjust latitude [**21N**] press, then use or adjust minutes [**25N**] the press
- 4 Then use or adjust GMT [GMT 3:00] then press

* if you want to know more about information of the city setting, please visit: www.userguide.hk >> city selection

6

QIBLA DIRECTION

After selecting your city code , the qibla direction will appear on the screen .The exact qibla angle will also be displayed. The angle is between 0°and 360°degree, clock wise from North.

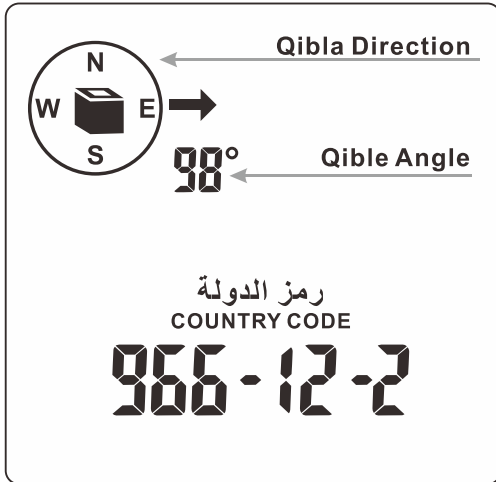

SETTING THE TIME

7

Setting the time, the calendars and alarms are almost the same, notice the number will be flashing when you set it.

To set the time, follow the steps below:

   	1) Move the setting switch to  2) Use  or  to adjust the hours, then press  (Notice the AM/PM icons) 3) Use  or  to adjust the minutes, then press  4) Switch back to  position.
---	--

NOTE

Whenever minutes are changed (in step 3), the seconds will be reset to **00**

SETTING THE GREGORIAN CALENDAR

The clock displays the Hijri or Gregorian calendar. To convert two calendars, press **SET**

To set the Gregorian (or Hijri) calendar, first make sure that the desired calendar is displayed, then follow the steps below:

	1) Move the setting switch to and press SET one time.
	2) Use or to adjust the year, then press SET
	3) Use or to adjust the months, then press SET
	4) Use or to adjust the days, then press SET
	5) If you need or hijri day, press SET, use or to adjust.
	6) Switch back to N position.

NOTE

After setting the Gregorian calendar, the Hijri calendar will be re-calculated according to the moon sighting at Makkah for that date. But, changing the Hijri calendar, does not affect the Gregorian calendar .

SETTING FAJR ALARM

9

This unique feature allows you to wake up exactly at the same time relative to fajr azan everyday.

For example, suppose you set this alarm at 5:10 AM and the fajr azan is at 5:00. If fajr azan becomes 5:01 in the next day, then automatically the fajr alarm will change to 5:11 AM. This way, the alarm will always ring 10 minutes after fajr azan everyday.

To set this alarm, look up the current fajr azan time from the clock and decide your desired wake up time, then follow the steps below:

	1) Move the setting switch to 
	2) Use  or  to adjust the hours, then press 
	3) Use  or  to adjust the minutes, then press 
	4) Switch back to  position.
	5) Turn ON the alarm switch. The icon  will be displayed.

NOTE If Fajr alarm is set to ring exactly at Fajr azan time, the sound of azan will be disabled.

EQAMAH means count rest time to Iqamah(pray start), follow the steps below to set:



The image shows a digital clock interface. At the top, there is a row of icons: a square with 'N', a bell, a crescent moon, a speaker, and a clock. Below these is a horizontal bar with a switch. The main display shows '00' in large digits, followed by '5:38' in larger digits. Below '5:38' is a sun icon with the word 'فجر' (Fajr) and 'FAJR' below it. At the bottom, there is another row of icons: a square with 'N', a bell, a crescent moon, a speaker, and a clock. Below these is another horizontal bar with a switch.

- 1) Press and hold **SET** ,then move the switch to the .
- 2 Use  or  to adjust Alfajr Iqamah,then press **SET**
- 3 Press **SET** for others.
- 5) Switch back to **N** position.

Notes

If you don't set Eqamah option, the clock will automatically count minutes after current azan (up to 30 minutes)

SETTING DAILY ALARM

The daily alarm is a regular alarm that rings at the same time everyday. Moreover, this alarm can be set to ring only on weekdays (see page 18).

Setting the daily alarm is shown below:

	1) Move the setting switch to  2) Use  or  to adjust the hours, then press  3) Use  or  to adjust the minutes, then press  3) Use  or  to choose 6 modes daily alarm. 4) Switch back to  position. 5) Turn ON the alarm switch. The icon  will be displayed.
--	---

NOTE

To stop any alarm, you may press **STOP** button (rather than turning OFF the alarm switch).

SETTING SPECIAL ALARM

12

In addition to fajr and daily alarms, this clock also include an extra alarm (special alarm) for one time appointment. When this alarm is set, the other two alarm settings are not affected.

The steps below illustrate the setting of this alarm.

	1) Move the setting switch to  2) Use  or  to adjust the hours, then press  3) Use  or  to adjust the minutes, then press  4) Switch back to  position.
--	--

To set Daylight Saving Time (DST) for any city (except cities in the Arabian peninsula), press and hold the  button for few seconds. You will hear a soft beep and will notice that the current time and the azan times are increased by one hour. the icon **DST** () () will also appear on the screen.

To get back to standard time, press and hold  button for few second. the **DST** icon () () will disappear and the current time and azan times will decrease by one hour.

AZAN SAFETY TIME

14

As needed, any azan time can be adjusted forward or backward by a fixed number of minutes, as follows:

	1) Press and hold SET Move the switch to  position, then release 2) Use  or  to set the safety time for fajr azan. Fajr azan time will be displayed. 3) Press SET to adjust Shuroq safety time, ... etc. 4) Switch back to N position.
---	---

NOTE

After selecting another city, all safety times are reset, and it will be readjusted if you need.

The sound of the complete azan can be played at every azan time. And the volume level can be adjusted using the volume switch.

When the azan sound is turned OFF, the icon  will disappear from the screen, and three beeps will sound at the time of each azan.

Model **HA-4009 HA-4012** clock also include a speaker jack which can be connected to an external speaker.

NOTE

When an alarm is set at the time of any azan, that azan sound will be disabled.

AZAN TAQWEEM SYSTEMS

16

Fajr and Isha times are calculated by either an angle of the sun below the horizon or by an interval of time.

This clock is programmed to use the local taqweem or the most widely used system for your city. Also, you can change to another system, as follows:

Selecting Hanafi Asr Azan:

Press and hold **SET** and move the switch to the  position, then release **SET**. Use  or  to select  (which means Hanafi) or  which means regular Asr time. Notice that Asr azan time will be flashing (and changing) during Hanafi setting mode.

Selecting Taqweem System (for Fajr & Isha):

Press and hold **SET** and move the setting switch to the position  then release **SET** and press it again.

Use  or  to select the desired system as follows:

H	Hanafi	
dF	Local tapweem	
19:F	15:F	18:F Umm al-qura taqweem.
19:20		
1:30		Fixed time, fajr time is determined as a fixed interval of time before shrooq time. Isha time is determined as a fixed interval of time after magrib azan. This system is used in Northern Europe.
19:17		Egyptian taqweem (egypt)
15:15		Union is Islamic society of North America (isna)
18:18		University of Science Islamic in Karachi (Hanafi taqweem)
18:17		Muslim world league (muslim league)

NOTE

After re-selecting a city, the clock will be reset to use the city's default taqweem.

STOPPING THE ALARMS

Simply press the **STOP** button to stop any alarm (in this case, the alarm will ring again on next day).

Alarms can also be stopped by turning off the alarm switch (but in this case, the alarm will not ring again on the next day).

SNOOZE OPTION

When the ((SNZ)) switch is turned ON, the clock will be in snooze mode (and the **snz** icon will be displayed). In this case, after stopping the alarm (by pressing the **STOP** button), the alarm will ring again after five minutes. (Notice that the **snz** icon will be flashing).

To completely stop the alarm, press and hold the **STOP** button for few seconds until you hear the beep. (Notice now that **snz** icon is not flashing).

WEEKEND SETTING

18

The daily alarm can be automatically disabled on weekends, as the following options:

- 1- rings everyday except Saturday and Sunday
- 2- rings everyday except Sunday
- 3- rings everyday except Thursday and Friday
- 4- rings everyday except Friday
- 5- rings everyday (no icon, or blank)

Example: To set the daily alarm to ring on one of these options follow the steps below:

 The diagram shows the alarm clock interface. At the top, there is a row of icons: 'N', a bell, a crescent moon, a hand, and a clock. Below this is a horizontal bar with a switch in the 'ON' position. In the center, the time '6:30' is displayed. To the right of the time is a sun icon with a bell inside it, and the number '6' in a box. Below the time, there is another row of icons: 'N', a bell, a crescent moon, a hand, and a clock. Below this is another horizontal bar with a switch in the 'ON' position. At the bottom, there is a switch labeled 'OFF' and 'ON' with a bell icon next to it.	1) Move the setting switch to  and press SET twice. 2) Use  or  to select the symbol  then press SET. The selected days will be flashing 3) Switch back to N position. 4) Turn ON the alarm switch. The icon  will be displayed.
---	--

NOTE

If the weekend in the selected city is on Thursday and Friday,  means this alarm doesn't rings on Thursday and Friday and  means it does not ring on Fridays.

The Hijri calendar in this clock is calculated based on the astronomical moon sighting at Makkah. Accordingly, It is re-calculated after setting the Gregorian calendar.

This unique feature helps to determine the Gregorian dates for the corresponding Hijri-based Islamic events. For example, to know Eid Al-Fitr in the year 1439, set the Gregorian date to 15/6/2018 , then check whether the calculated Hijri date is 1/10/1439 or not.

FREQUENTLY ASKED QUESTIONS

20

- Q:** Azan times are not correct. Why?
- A:** Make sure you have correctly set the following:
a) city code, **b)** Gregorian calendar, **c)** Day light saving time option, **d)** Taqweem system (azan time calculation methods).
- Q:** How can I set the daily alarm so that it will not ring on Sundays?
- A:** Follow the weekend setting on page 9 and select the little 6 symbol in step 2.
- Q:** How can I find out the astronomical beginning of Ramadan at Makkah for any year?
- A:** Set the Gregorian calendar to the expected date, then check the astronomically calculated Hijri calendar.
- Q:** I can not hear the Azan sound. Why?
- A:** Make sure the alkaline batteries are not weak and also the volume control switch is turned ON.
- Q:** The azan sound is working for all prayers except for Fajr azan. Why?
- A:** It is possible that Fajr alarm is set to ring exactly at Fajr azan time.
- Q:** After stopping the alarm, it rings again after five minutes. Why?
- A:** Alarms are in **SNZ** mode, press and hold **STOP** for few seconds (until you hear soft beep); this can also be used will also stop all alarms coming in next 20 minutes.